



VapourPressure

Powered by icon



icon
intelligent scientific analysis

icon scientific limited

t +44 (0) 1225 667050

e info@iconscientific.com

w www.iconscientific.com



All icon products are...

Easy to use: with an intuitive glass touch-screen, wipe-clean graphic user interface with multi-language options.

Certified to global standards: ATEX, IECEx, TIIS, EAC-EX, ETL approved to give absolute confidence and peace of mind in hazardous areas and manufactured under an ISO9001:2008 certified Quality Management System.

Robust and fully explosion proof: no air or inert gas purging required for safe operation in explosion hazard areas.

Safety assured: with an alarm for internal sample leakage.

Highly efficient: with low sample consumption and a sample flow monitor.

Flexible: with auto validation calibration options and standard modbus, 4-20mA and alarm contact outputs.

What does it do?

The icon scientific Vapour Pressure Analyser measures the pressure exerted by vapour in equilibrium above a liquid at a specified temperature and vapour-liquid ratio. Vapour pressure is a measurement of volatility. Vapour pressure measurement finds use in gasoline, LNG condensate, crude oil and liquefied petroleum gas production.

The Vapour Pressure Analyser uses the piston expansion principle to measure vapour pressure in line with the latest vapour pressure test methods. It can perform single or multiple expansions, and while it normally operates at 37.8°C (100°F) and a 4:1 liquid vapour ratio, its measuring temperature and liquid-vapour ratios can be varied up to 60°C and 20:1. The liquid and vapour volumes are tracked by laser for unparalleled accuracy.

How does it work?

The sample flows into a piston based measuring cell via low dead-volume solenoid valves, and is either flushed or isolated for measurement. Within the measuring cell, a resistance thermometer enables the cell temperature to be accurately controlled at the required measurement temperature. A small defined volume of the sample is held in place by the piston, which is moved to achieve the desired vapour-liquid ratio. Once equilibrium is established, the absolute pressure inside the cell is converted into actual vapour pressure as required by the test method being emulated.

Why choose the icon scientific Vapour Pressure Analyser?

Vapour pressure measured according to modern test methods: results can still be correlated back to Reid Vapour Pressure by the use of published and accepted correlation factors.

Precise temperature control: using a Peltier cooler and cartridge heater, the cell temperature is accurately controlled and measured for better repeatability.

Laser precise liquid-vapour ratio measurement: provides superior repeatability.

Test method adaptability: variable piston expansion enables vapour pressure to be tested in accordance with various standard test methods.

Applicable Test Methods

The directly applicable test methods are:-

ASTM D5191: Standard Test Method for Vapour Pressure of Petroleum Products (Mini Method).

ASTM D6378: Determination of Vapour Pressure (VPX) of Petroleum products, Hydrocarbons, and Hydrocarbon-Oxygenate Mixtures (Triple Expansion Method).

ASTM D6897: Vapour Pressure of Liquefied Petroleum Gases (LPG) (Expansion Method).

ASTM D6377 Standard Test Method for Determination of Vapor Pressure of Crude Oil:VPCR_x (Expansion Method).

Now approved by the EPA for environmental considerations and being adopted for all crude oil applications ultimately replacing ASTM D323 (RVP).

The analyser can also perform "True Vapour Pressure" analysis by conversion of correlated RVP data by back extrapolation of multiple expansion curve to a user defined Vapour liquid ratio as described in ASTM D6377.

TVP may be calculated/measured at temperatures up to up to 100°C.

The analyser can also estimate Gas Oil Ratio (GOR).

The correlated test methods are:-

ASTM D323: Standard Test Method for Vapour Pressure of Petroleum Products (Reid Method).

ASTM D4953: Standard Test Method for Vapour Pressure of Gasoline and Gasoline-Oxygenate Blends (Dry Method).

ASTM D5190: Standard Test Method for Vapour Pressure of Petroleum products (Automatic method).

ASTM D5188: Standard Test Method for Vapour-Liquid Ratio Temperature Determination of Fuels (Evacuated Chamber Method).

ASTM D5482: Standard Test Method for Vapour Pressure of Petroleum Products (Mini Method- Atmospheric).



ASTM D6378 - RVPE Correlation to ASTM D323

ASTM D6377 - Crude Oil

ASTM D6378 - Gasoline - Triple Expansion

ASTM D5191 - DVPE

ASTM D6897 - LPG Vapour Pressure



Specification

Measuring sensor ranges (output freely adjustable within range)	0-2 bara (0-29 psia) 0-5 bara (0-72.5 psia) 0-20 bara (0-290 psia)
Repeatability	Application dependent but typically better than 0.04psi (0.3kpa) on 0-2 bara range.
Cycle Time	4-6 minutes for single expansion methods. 6-12 minutes for triple/multiple expansion methods.
Vapour/Liquid Ratio	Normally 4:1 but adjustable as required by the analysis method.

Sample Requirements

Filtration	Sample should be free from non-dissolved water and filtered to 10 microns
Sample Pressure at Inlet	7 barg/102psig (2 bara range) 20 barg/290 psig (5 bara range) 25 barg/363 psig (20 bara range)
Sample Pressure at Outlet	Atmospheric drain (standard). Sample can be returned to pressure provided a minimum of 2 bar differential is maintained.
Sample Temperature at Inlet	Between 0-60 Deg.C
Sample Consumption	Typically 6-20l/hour.

Utility Requirements

Instrument Air	Not Required
Nitrogen	Not Required
Cooling Water	Not Required
Power	115VAC 50Hz, 230VAC 50Hz 115VAC 60Hz, 230VAC 60Hz Max 500VA

Installation Requirements

Location	Unit must be located out of direct wind sun and rain
Ambient Temperature	+5 to +40 Deg.C
Ambient Humidity	0-95% RH, non-condensing.

Control System

Control System	Based on fan-less industrial PC with solid state hard drive.
Graphical User Interface(GUI)	17" armoured glass touch-screen. The GUI is used to program the unit and display current and historical analyser results and alarm status.

Inputs/Outputs

Analog Output	3 x 4-20mA (active) isolated output is provided as standard for VP result, (+GOR and TVP ASTM D6377 only).
Communications	Modbus RTU over RS485, Ethernet (TCP/IP) or optional fiber optics. Optional OPC c/w server software over RS485.
Analog Inputs (optional)	The analyser can read in up to 4 active 0-10V or 4-20mA signals. These inputs may be displayed and the values can have alarm levels associated with them.
Digital (contacts) Inputs (optional)	The analyser can monitor up to four volt free external contacts. The contacts may be included in the alarm table.
Alarms	Any available alarm condition within the analyser may be allocated as active or inactive. Active alarms are notified on screen and stored in the alarm history table. Active alarms can be set by the user to activate a warning alarm contact or a fatal alarm contact. A warning alarm is for notification only while a fatal alarm causes the analyser to suspend its operation.
Digital (contacts) Outputs	In addition to the above Alarm contacts, the analyser also provides the following contact outputs: New Result: a 10 second contact to notify that a new analyser result is available. Data Valid: this contact will operate if the analyser is operating but the data is not valid because calibration or validation is in progress or the analyser is being run in manual mode. Calibration/Validation: indicates that the analyser is in calibration/validation. Spill Alarm: This contact will operate in the case of a leak being detected in the analyser enclosure. All contact ratings are 24VDC 0.5A, 230VAC, 1A
Certification	
Hazardous Area Certification	The icon Vapour Pressure analyser is Exd certified to ATEX, IECEx, TIIS and EAC-EX standards, for zone 1 or zone 2 use in gas groups IIA, IIB or IIB+H2 with a variable T-rating depending upon application. It is also ETL listed for Canada and the USA Class 1, Div 1, groups B,C,D.
IP Ratings	Tested and certified to IP67 (dust tight and protected from temporary total immersion in water). Classification broadly equivalent to NEMA 6

Dimensions & Weights

Notes:


All dimensions in mm

Unpacked weight approx. 418kg


Packed weight approx. 525kg



Front view

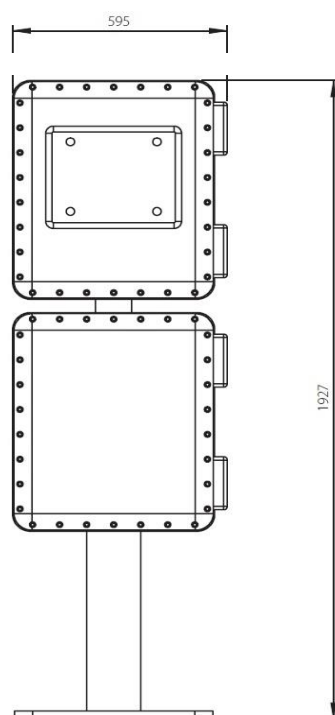

Side view

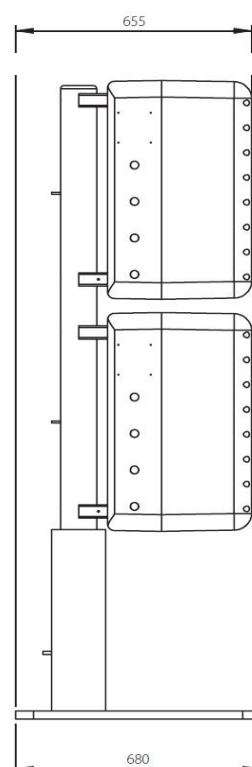

Note: icon scientific products are subject to a program of continuous development and improvement and specifications are liable to change without notice.
Please check that you have the latest information available before relying on any specification. V01 (02/2016)